


New! Heavy Duty Bag-In-A-Bag Chlorine Free Infectious Disease Transport Pouch (IDTP™)

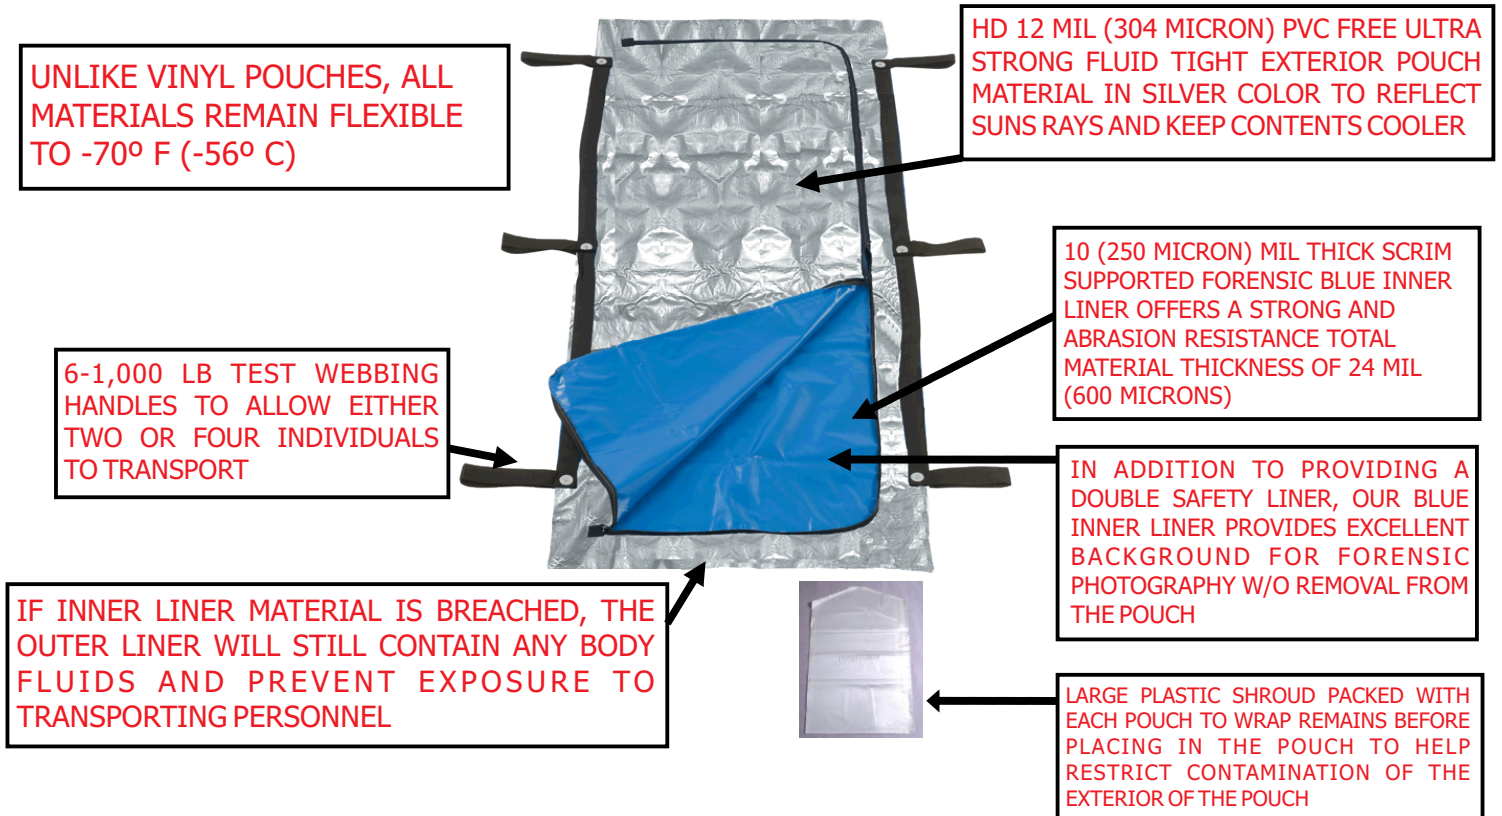

Suitable for Safe and Environmentally Friendly Recovery and Transport of Infectious Human Remains Directly to Cremation

Adult Size: BBENV-CFX-90CF_HDBL - 36 X 94" ENV ZIPPER POUCH W/FORENSIC BLUE INNER LINER

X-Large Size: Part no: BBENV-CFX-90CF-HDBXL (X-Large 48" x 96")

NATIONAL STOCK NUMBER (NSN): 9930-01-632-0180



Medicalproducts, Ltd. Inc. P.O. Box 80685, Conyers GA 30013
 Toll Free: (800) 345-2922 Fax: (800) 372-5649 Ph: (678) 413-9200
 Internet Site: www.medicalproducts.com Email: sales@medicalproducts.com

**Recipient of the Department of Defense Vendor Excellence Award
 A Service Disabled Veteran Owned Business**



**PRODUCT SPECIFICATIONS FOR MEDICALPRODUCTS LTD
 ENVELOPE ZIPPER HEAVY DUTY 6 HANDLED TRANSPORT POUCH
 PART NO: BBENV-CFX-90CF-HDBL (SILVER W/BLUE LINER) W/SHROUD**

OUTER SHELL MAT'L	12 MIL (304 MICRON) "SUPER-TUFF" LD POLY-ETHYLENE COATED WOVEN HI DENSITY SCRIM MATERIAL. EXCEEDS TENSILE STRENGTH, TEAR RESISTANCE AND PUNCTURE RESISTANCE OF 16 MIL THICK VINYL RESULTING IN A VIRTUALLY TEAR RESISTANT PRODUCT IN NORMAL USE. SILVER COLOR TO REFLECT SUNS RAYS TO MAINTAIN COOLER INT TEMP. ELIMINATES POSSIBLE LEAKAGE IN THE EVENT EITHER THE INNER LINER OR THE OUTER POUCH IS PUNCTURED OR BREACHED.
INNER LINER	10 MIL (250 MICRON) HD "SUPER-TUFF" LD POLY-ETHYLENE COATED WOVEN HI DENSITY SCRIM MATERIAL. EXCEEDS TENSILE STRENGTH, TEAR RESISTANCE AND PUNCTURE RESISTANCE OF 16 MIL THICK VINYL RESULTING IN A VIRTUALLY TEAR RESISTANT PRODUCT IN NORMAL USE (BLUE COLOR FOR FORENSIC PHOTOS WITHOUT REMOVING REMAINS FROM THE POUCH)
GENERAL CONSTRUCTION	ENDS SEAMS ARE FOLDED, SEWN AND SEALED FOR STRENGTH AND PROTECTION AGAINST POSSIBLE LEAKAGE AND TO COMPLY WITH OSHA REGULATION 3130 INVOLVING CONTAINMENT OF BODY FLUIDS.
ACCESS PANEL	30 X 88" (148") ENVELOPE STYLE ACCESS PANEL FOR EASY LOADING AND UNLOADING. SECURED WITH #8 CF NYLON RUST RESISTANT ZIPPER WITH DUAL PADLOCK STYLE ZIPPER PULLS ALLOWS OPENING BAG FROM EITHER END.
HANDLES	6 HANDLES OF 2" WIDE 16 PT 1,000 LB TEST HEAVY DUTY POLYPROPYLENE WEBBING RIVETED TO THE OUTER SHELL AND REINFORCED WITH ZINC PLATED WASHERS. THIS WILL ALLOW TRANSPORT BY 2, 3, 4, 5 OR 6 INDIVIDUALS STATIC LIFT TESTED TO 450 LBS. [204 kg]
FINISHED SIZE	36 W X 94" L (92 cm x 240 cm) - 72" [183 cm girth]
PACKAGING	PACKED WITH SHROUD-02-01 FOR WRAPPING REMAINS BEFORE PLACING IN POUCH PACKED IN INDIVIDUAL POLY BAGS PACKED - 6 UNITS PER CASE WEIGHT PER CASE 33 LBS (15 KG) / CARTON SIZE: 18 X 18 X 12" (46 X 46 X 31 cm)
GENERAL PROPERTIES	<p>IMPERVIOUS TO BLOOD AND NORMAL BODY FLUIDS. MEETS EPA BURN REQUIREMENTS FOR INCINERATION TYPE OF DISPOSAL. INFECTIOUS DISEASE REMAINS CAN BE CREMATED WITHOUT TRANSFER TO ANOTHER PVC FREE POUCH THEREBY REDUCING EXPOSURE TO HANDLING PERSONNEL.</p> <p>SHELF LIFE IN EXCESS OF 10 YEARS IN NORMAL ENVIRONMENTAL CONDITIONS. MAX. TEMP USE - 180° F (82° C). FLEXIBLE TO (-) 70° F (-57° C).</p> <p>COLOR - SILVER EXTERIOR W/FORENSIC PHOTOGRAPHY BLUE LINER</p> <p>NATIONAL STOCK NUMBER (NSN): 9930-01-632-0180</p>



Medicalproducts, Ltd. Inc. P.O. Box 80685, Conyers GA 30013
 Toll Free: (800) 345-2922 Fax: (800) 372-5649 Ph: (678) 413-9200
 Internet Site: www.medicalproducts.com Email: sales@medicalproducts.com

**Recipient of the Department of Defense Vendor Excellence Award
 A Service Disabled Veteran Owned Business**